


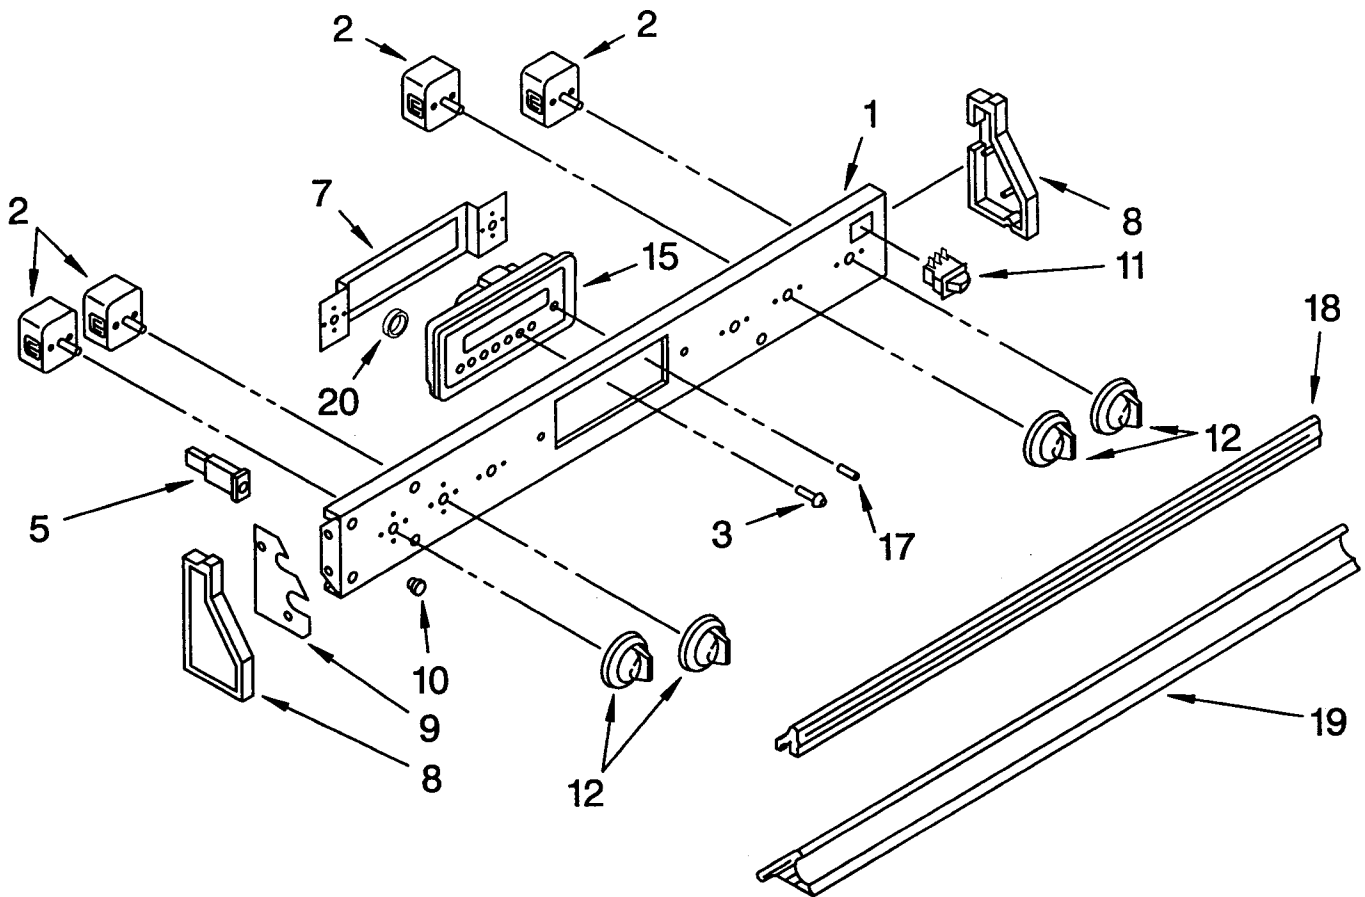

CONTROL PANEL PARTS


For Model: RS363PXYQ2
(Q-Designer White)



1	4371959	Panel, Control
2		Switch, Infinite
	4371443	6" (2)
	4371385	8" (2)
3	4371644	Button, Clock (8)
5	4371380	Indicator Light
7	4371373	Bracket, Clock
8		End Cap
	4371374	R.H.
	4371375	L.H.
9	4371389	Plate, End Cap
10	4371440	Lens, Light
11	4371646	Switch, Oven Light
12	4371642	Knob, Infinite Switch (4)
15	4371376	Clock, Electronic
17	4371643	Knob, Clock (1)
18	4371377	Rail, Top
19	4371378	Rail, Bottom
20	4371645	Spacer, Timer

COOKTOP AND OVEN PARTS


For Model: RS363PXYQ2
(Q-Designer White)

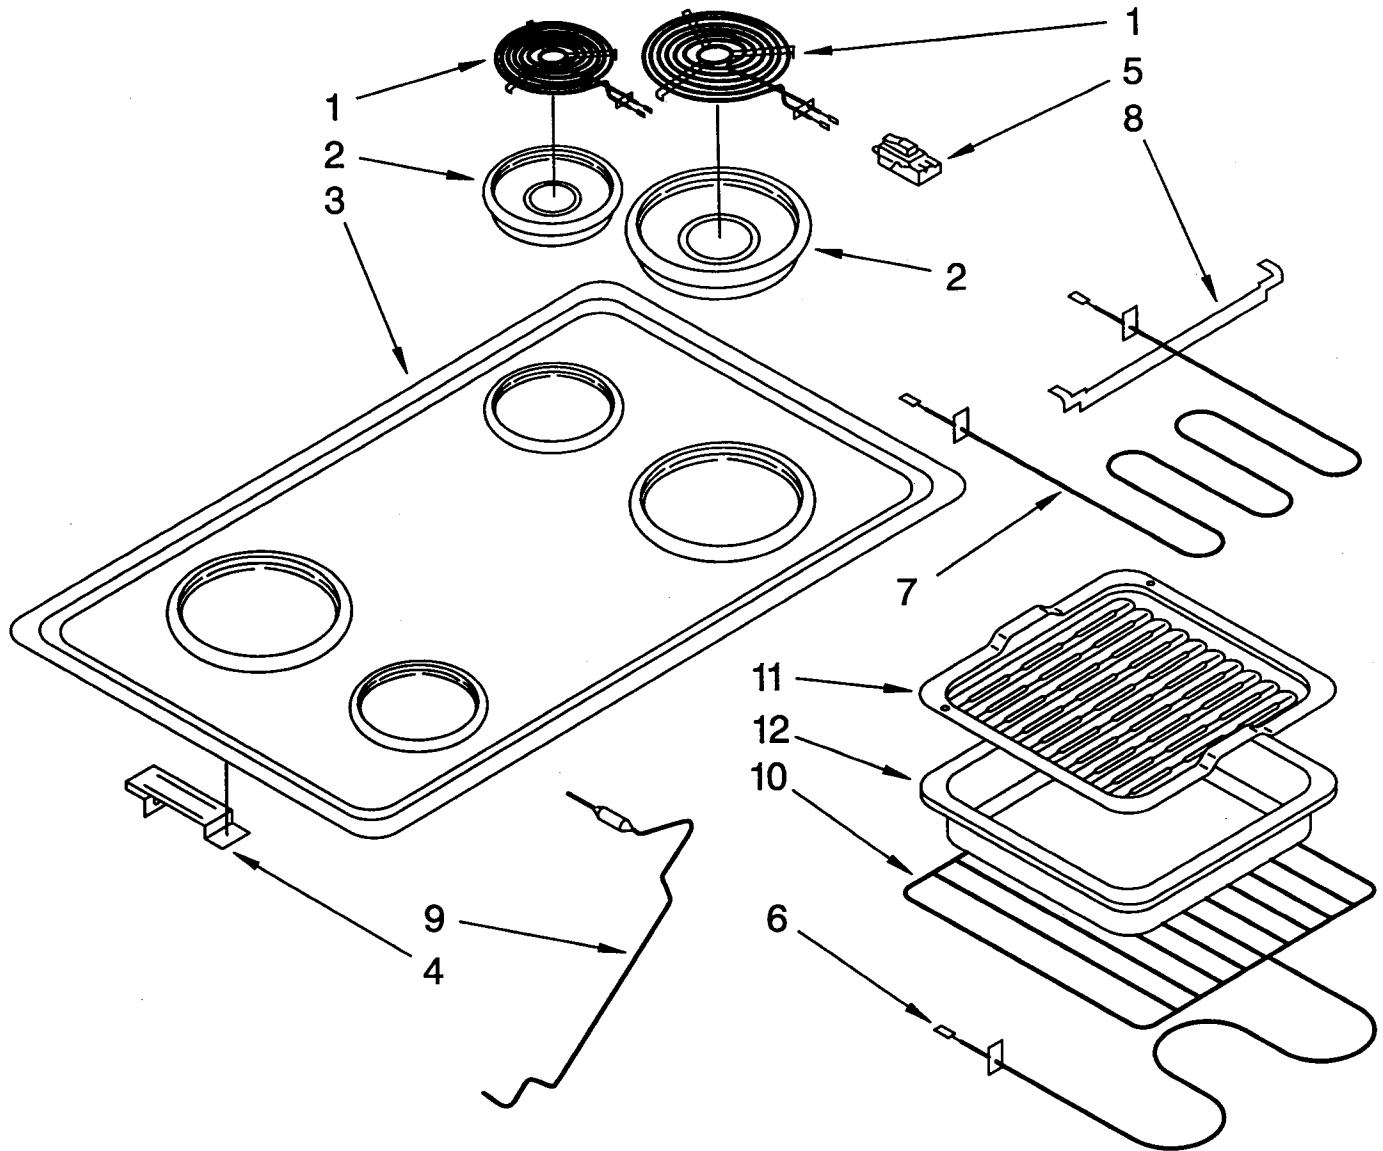

1		Element, Surface
	4371427	6" (2)
	4371354	8" (2)
2		Pan, Reflector
	4371387	6" (2)
	4371445	8" (2)
3	868473	Cooktop, White
4	4371430	Hinge, Cooktop
5	4371379	Receptacle (4)
6	4371426	Element, Bake
7	4371351	Element, Broil
8	866429	Support, Element
9	4371397	Rod, Cooktop Support
10	4371483	Rack, Oven
	4371579	Rack, Oven Offset
11	4372022	Insert, Broiler Pan
12	4372023	Pan, Broiler

OVEN PARTS

For Model: RS363PXYQ2
(Q-Designer White)

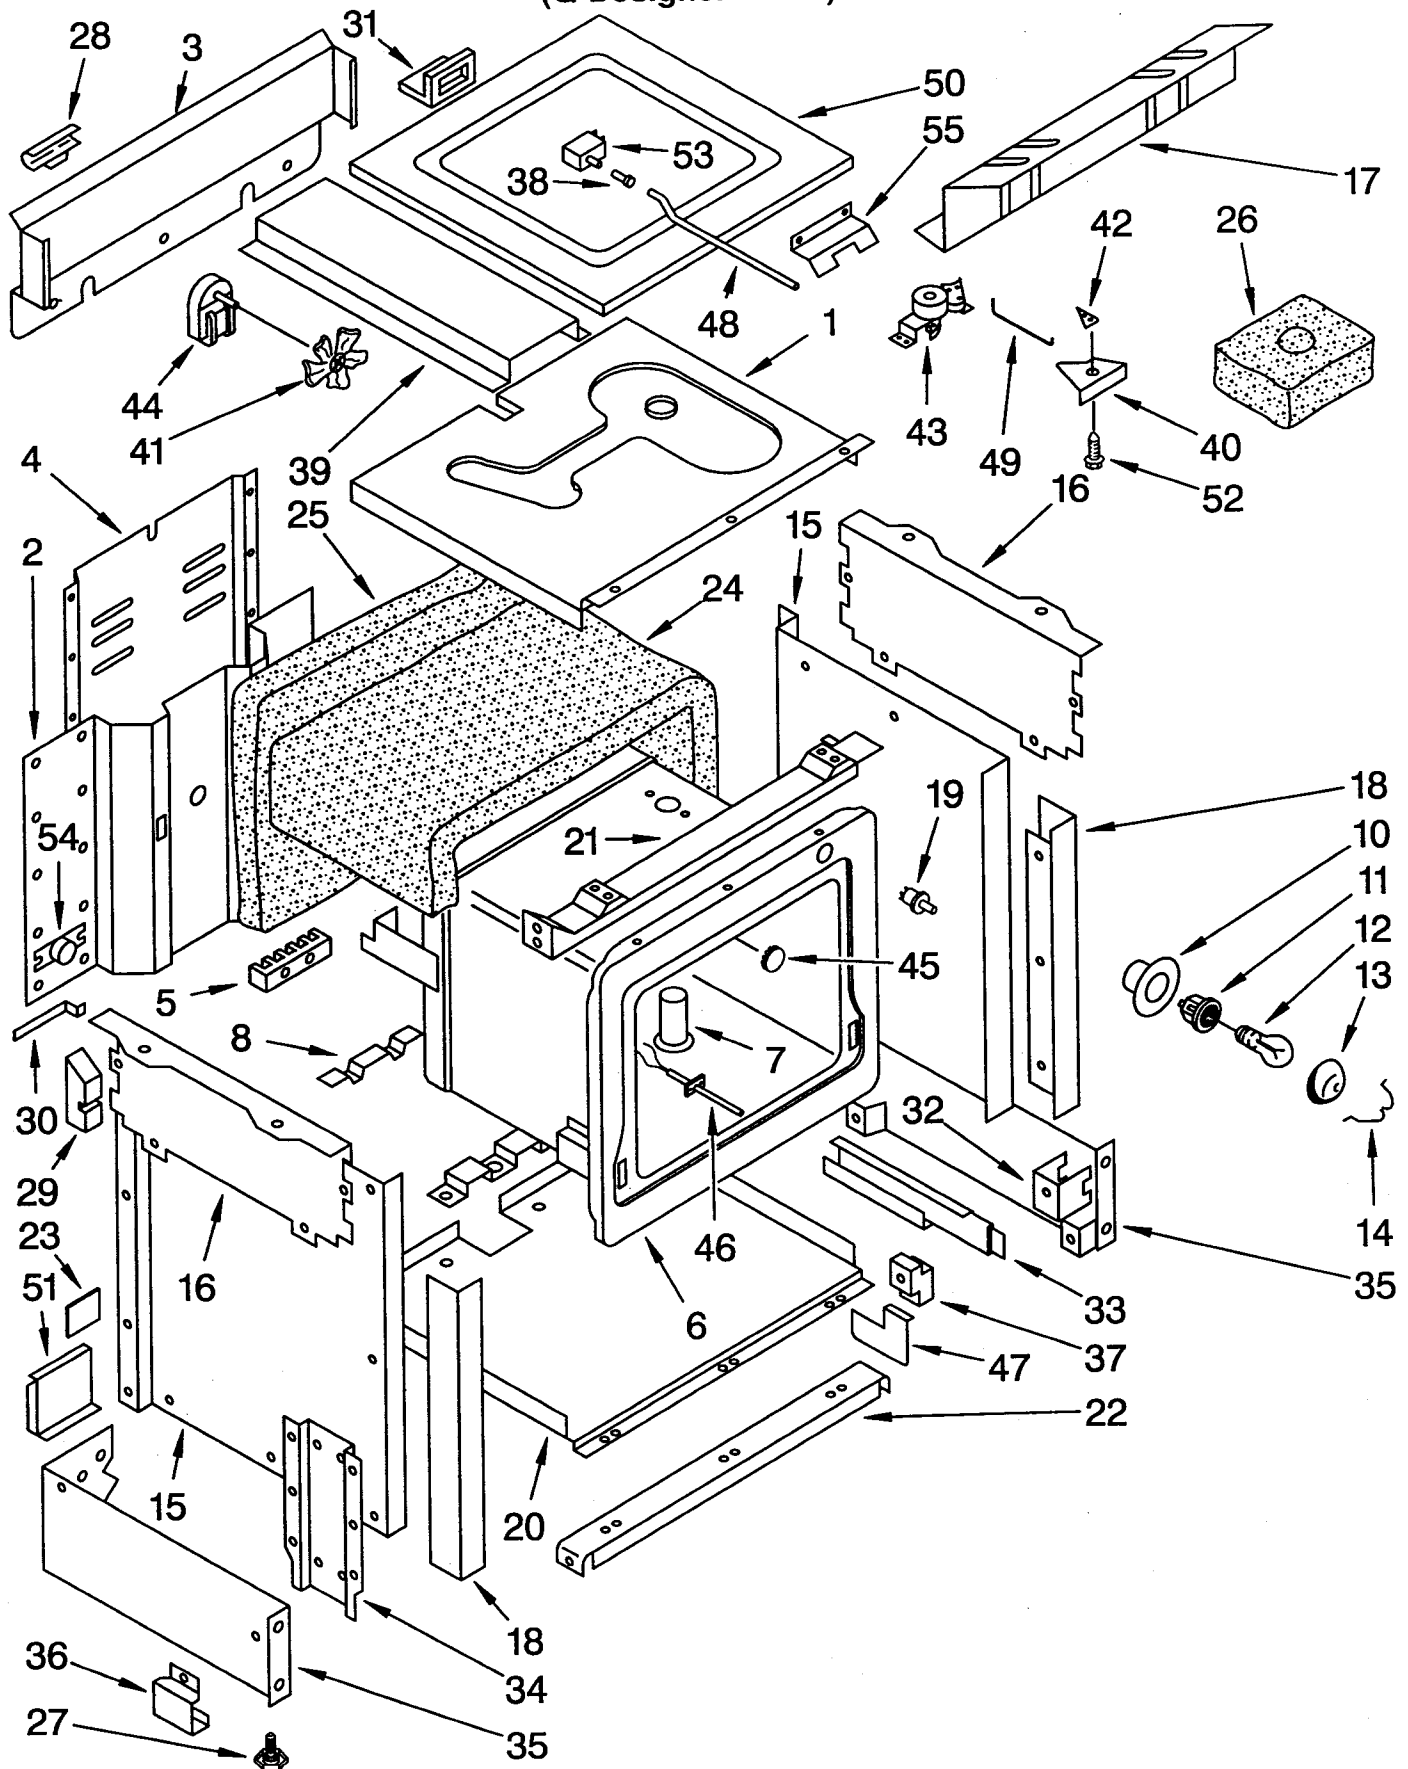

1	4371402	Retainer, Top
2	4371330	Panel, Rear (lower)
3	4371573	Panel, Rear (upper)
4	4372017	Cover, Wire
5	4371409	Terminal Block
6	4372012	Liner, Oven
7	4371411	Tube, Vent
8	816473	Plate, Mounting
10	4371293	Cup, Oven Light
11	4371450	Receptacle
12	4372020	Bulb, Light
13	4372021	Lens, Oven Light
14	4371394	Retainer, Lens
15	4371446	Retainer, Insulation (2)
16	4371370	Panel, Side (2)
17	4371403	Shield, Wire
18	4371410	Trim, Oven Front (2)
19	4371452	Switch, Oven Light
20	816728	Shield, Bottom Insulation
21	4372013	Bracket, Cooktop
22	4371424	Channel, Oven
23	4371388	Plate, Filler (2)
24	4372016	Insulation, Wrap
25	4371362	Insulation, Back
26	4372014	Insulation, Vent
27	4371398	Leg, Leveling (4)
28	4371335	Bracket, Hinge Support
29	4371331	Counterweight (2)
30	4371332	Retainer, Weight
31	4371575	Bracket, Latch
32	4371404	Spacer (2)
33		Rail, Drawer
	4372019	L.H.
	4372018	R.H.
34	4371406	Support, Front (2)
35		Panel, Lower Side
	4371372	L.H.
	4371371	R.H.
36	4371449	Shield, Toe
37	4371429	Glide, Front (2)
38	4371574	Cap, Push Rod
39	4371338	Channel, Duct
40	816857	Housing, Latch
41	4371577	Blade, Fan
42	4371167	Latch, Door
43	4371367	Motor, Latch
44	4371368	Motor, Fan
45	4371390	Button, Plug
46	4371578	Probe, 3"
47	816474	Retainer, Door
48	4371395	Rod, Switch
49	4371396	Rod, Connecting
50	4372015	Panel, Sub-Top
51	4371333	Channel, Air
52	4371168	Axle, Latch
53	4371407	Switch, Latch
54	4371408	Switch, Thermo Cut-Off

55 4371401 Shield, Heat

Following Parts Not Illustrated

4371420 Anti-tip Kit

LITERATURE PARTS


LIT4372090 List, Repair Parts

LIT816986 Use & Care Guide

LIT816985 Installation Instructions

DOOR AND DRAWER PARTS

For Model: RS363PXYQ2
(Q-Designer White)

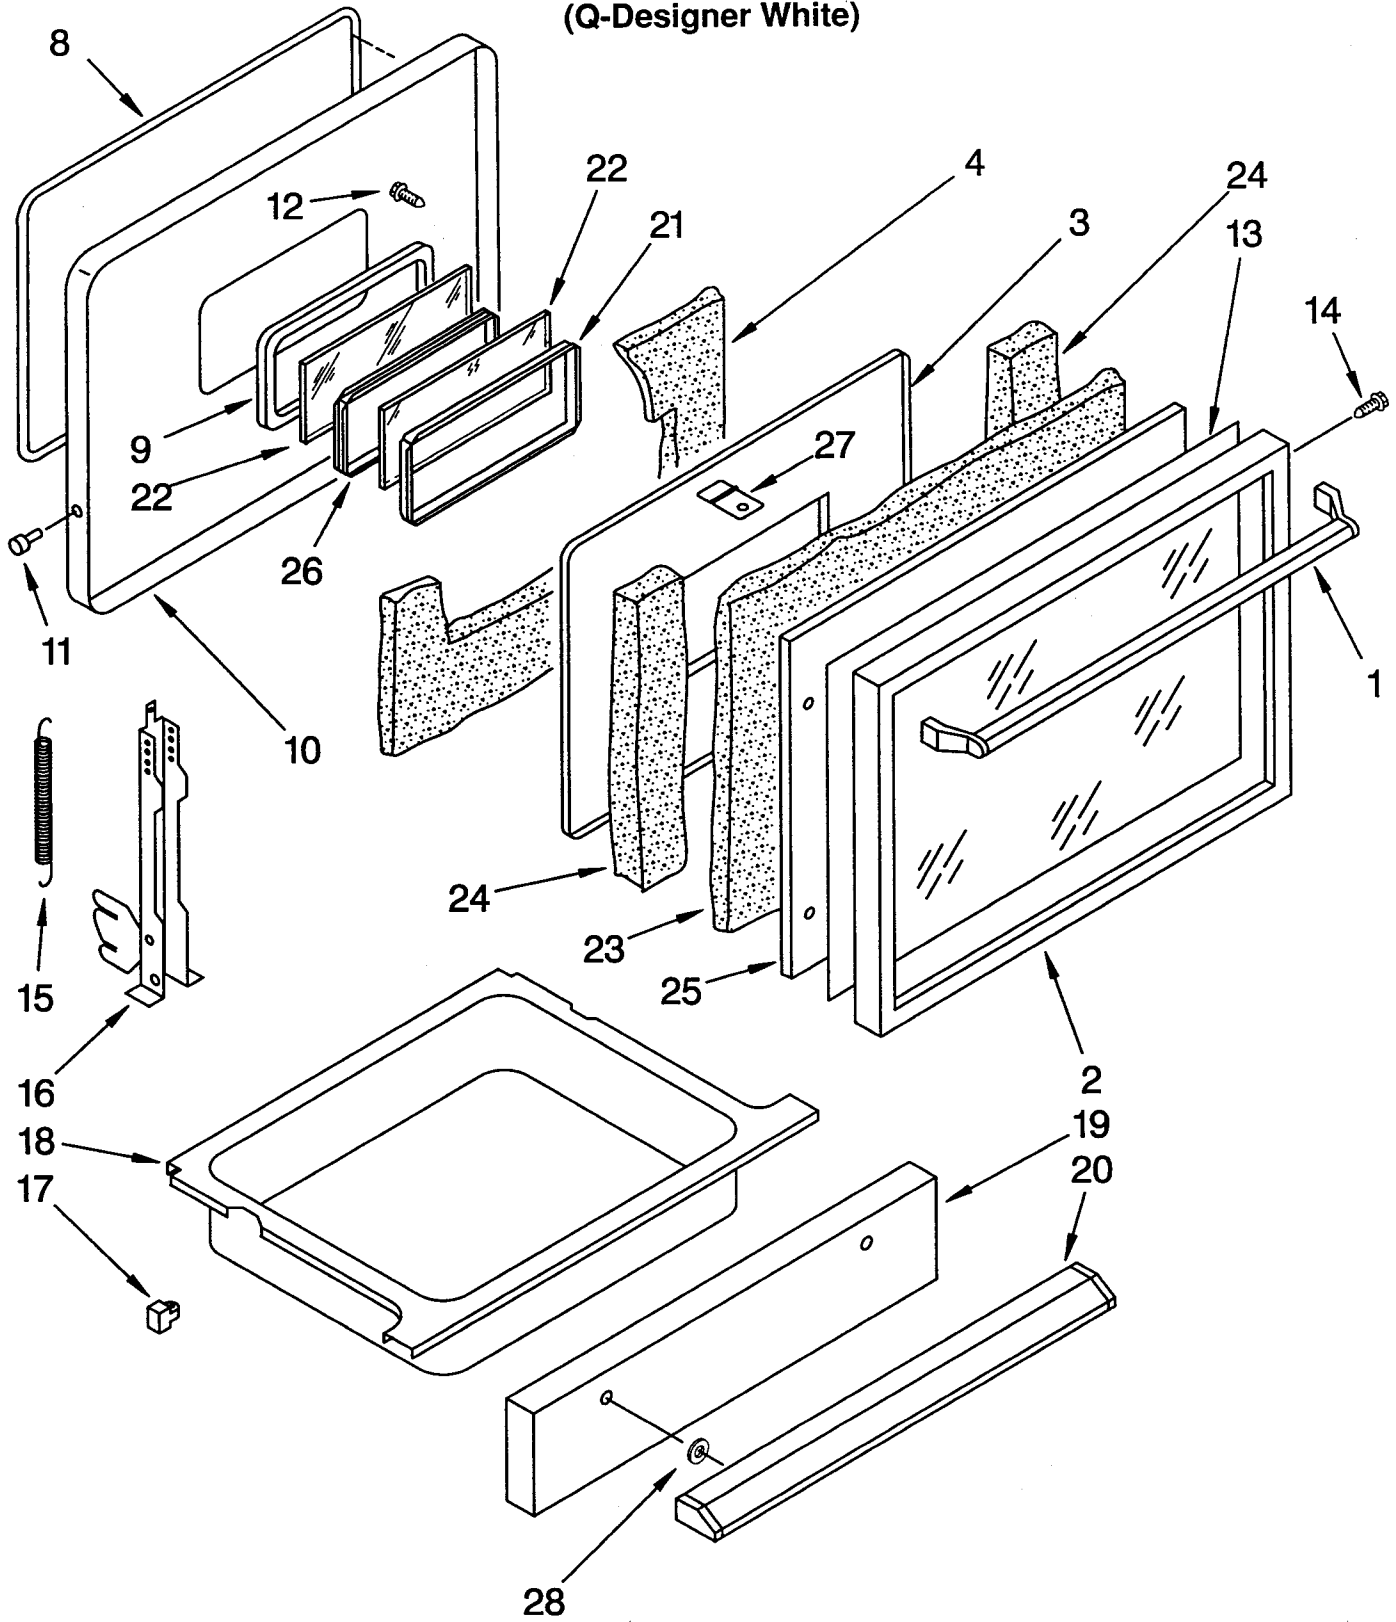

1	4371554	Handle, Door
2	4371648	Frame, Door
3	4372011	Liner, Door
4	4371341	Insulation
8	4371348	Seal, Door
9	816801	Seal, Glass
10	4372009	Baffle, Door
11	4371345	Plug, Button (2)
12	4372010	Screw, 10-24 x 5/8
13	4371647	Glass, Outer
14	4371346	Screw, Handle (4)
15	4371651	Spring, Door (2)
16	816496	Channel, Hinge (2)
17	4371413	Guide (2)
18	4371412	Drawer
19	4371649	Panel, Drawer
20	4371650	Handle, Drawer
21	816799	Collar, Glass
22	816681	Glass, Barrier (2)
23	4371342	Insulation
24	4371343	Insulation (2)
25	816800	Panel, Insulation
26	4371349	Spacer, Glass
27	816839	Strike, Door
28	4371405	Spacer, Handle